

Wireless Plug-In Doorbell

Model No.: KDB-10

Features:

1. Bell push button uses kinetic technology, no battery required.
2. Transmitter is with LED and waterproof.
3. Receiver is power by 110V~240V 50/60Hz, with EU plug.
4. LED indicator in the receiver.
5. Receiver is with 32 melodies and 4 levels volume control.
6. 100M operating range in the open air.
7. Self-learning technology avoid interference.
8. Ambient LED flashing on the receiver.

Features of technology:

- 1) 1 transmitter can control up to 8 AC receivers.
- 2) At most 4 transmitters can control 1 AC receiver.

Installation:

The transmitter can be mounted on door frame.
The chime should be plugged into the socket for main power supply.

Bell push button

 
 
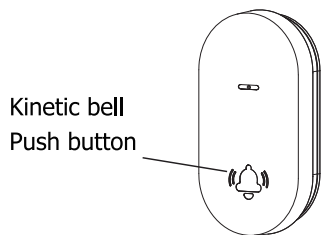 


Fig.1

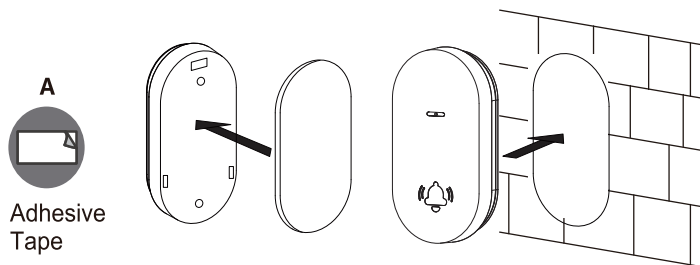

Adhesive Tape

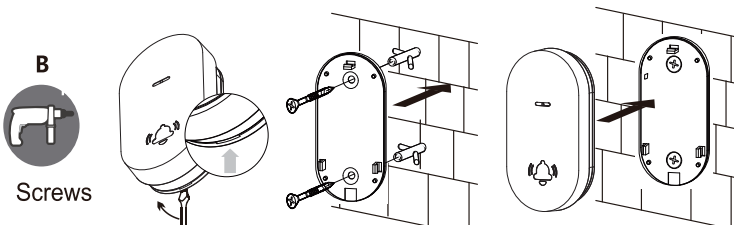

Screws

Fig.2

Receiver

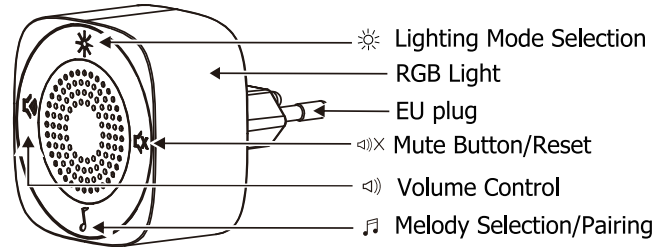 


Fig. 3

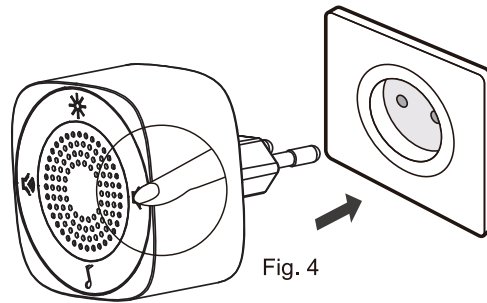 


Fig. 4

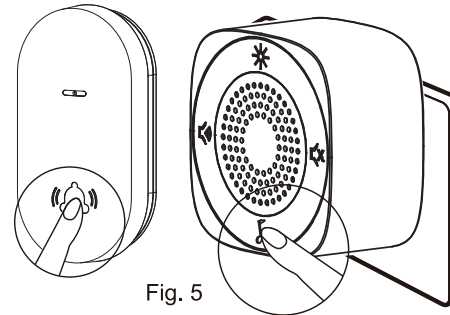 


Fig. 5

How to Pairing:

The bell push button and receiver have been pairing during the packaging. If your doorbell is not working well. You can follow up below 3 steps to reset the product.

1. Clear the pairing codes inside the receiver. Firstly, press /hold the "Mute Button" for about 8 seconds(Fig.4), you will see the receiver's LED flashing and hear the sound, then release the button, the codes are all removed from the internal memory.
2. Pairing the bell push button and receiver. Press and hold the "melody selection button" (Fig.5)until you hear "Ding-Ding" sound, press the bell push button and you will hear the receiver play "Ding" sound, press the "melody selection button" to exit the paring mode, now you can start using the doorbell.
3. Change melody: press the "melody selection button" to select your desired melody.